

READ THIS**NEAT STUFF!**

Before first use, pull the plastic battery tab to activate batteries.

BATTERY INSTALLATION

Sound Bites use two AAA batteries. To install or replace batteries, unscrew battery door and remove. Insert two AAA or LR03 batteries as shown.

Installation of batteries should be done by an adult. Do not mix new and old batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries (nickel-cadmium).

**LIMITED WARRANTY**

We warrant all products to be free from defects in material and workmanship under normal use for a period of 90 days from the date of original purchase. We will repair free of charge or replace at no charge should this product become defective under its warranty. Pack carefully and return postage to Tiger Electronics, Ltd. 980 Woodlands Parkway, Vernon Hills, Illinois 60061, U.S.A. Tel: 847-913-8100.

WOW YOU'RE REALLY READING THIS! WE THOUGHT YOU WOULD THROW IT AWAY!

**1 RECORD ANYTHING YOU CAN THINK OF:**

Hold down the red button to record anything you want! Record a message, make animal sounds, send a holiday greeting, record a clip of your favorite song, sing happy birthday, tell a joke. The possibilities are endless!

2 PLAY IT BACK INSIDE YOUR HEAD:

Touch the lollipop to your teeth and push the play button to hear your recording INSIDE your head. Or, give your special recording to a friend, your mom, dad, sister or brother.

3 WARP YOUR RECORDING

By pushing the up or down arrows, you can slow down or speed up your recording. Try it while recording or when you play it back. Both sound cool!

COLLECT ALL THESE Sound Bites PRODUCTS:

ROCKIN GUITAR ROCKIN SAX GIRL TALK ROADRACE RUGRATS LOONEY TUNES

To ensure proper function

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon zinc), or rechargeable batteries (nickel-cadmium).
- Battery installation should be done by an adult.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being recharged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

For more information about Tiger Electronics, our products and special promotions, please visit our website at: www.tiger toys.com

Visit Sound Bites at www.SoundBitesToys.com

Please retain instructions for future reference.

TIGER
ELECTRONICS, LTD.



®, TM, & © 1999 Tiger Electronics, Ltd. / Sound Bites. All rights reserved.
980 Woodlands Parkway, Vernon Hills, Illinois 60061, U.S.A.

 **WARNING:**
CHOKING HAZARD - Small parts.
Not for children under 3 years.

PRINTED IN CHINA
161000001IWT1-02