

PLAYSKOOL

MOO-O-O!

**AWESOME
TOSSEMS™**
Shake 'em, toss 'em or catch 'em
for a silly sound!

INSTRUCTIONS

PLEASE SAVE THESE
INSTRUCTIONS FOR FUTURE
REFERENCE.

MEOW!


COCK-A-DOODLE-DO!

1220
Ages 3 & Up


IMPORTANT: BEFORE DISCARDING BOX, SNIP CABLE TIE AND REMOVE SOUND UNIT FROM BELOW BASE.

NOTE: HANG CARD AND PLASTIC TAB IN BATTERY PACK MUST BE REMOVED AND DISCARDED BY AN ADULT BEFORE USE.


TO INSERT SOUND UNIT Note: batteries are included with product.

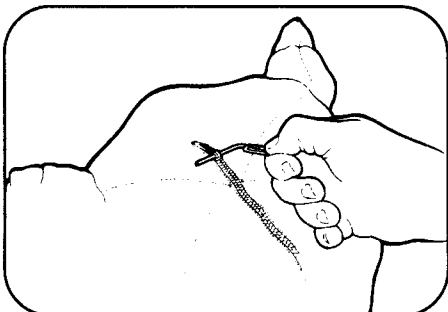

1. Remove sound unit from below base in box. Use scissors to snip cable tie.
2. Open zipper on bottom of toy. Because the zipper is not equipped with a standard pull tab, we recommend you use a paper clip to pull the zipper slide (see illustration).

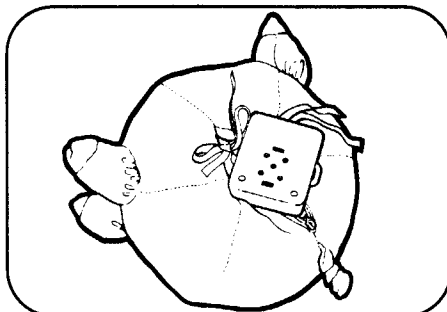

3. Reach into pocket and pull out both sets of ties. Slide end of tie through slot on side of sound unit and tie a shoe knot as shown. Repeat for slot on other side of sound unit.
4. Insert sound unit into pocket as far as possible. Close zipper and remove paper clip.

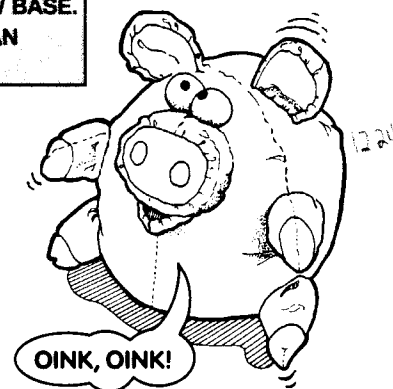


The sound unit in your Awesome Toss 'ems toy will be activated by making contact with the toy or shaking it.

TO REPLACE BATTERIES Phillips® screwdriver required.

Three A-76 button-cell batteries are included. When they are depleted, replace them with any of the following button-cell batteries: 357A, A-76, SR-44, or PX-76A. ALWAYS use three of the SAME battery style – never mix different styles of batteries.



1. Open zipper on bottom of toy and remove sound unit.
2. Loosen the small screw that secures battery compartment door, and remove door. (It may be easier to untie unit before removing screw from battery door.)

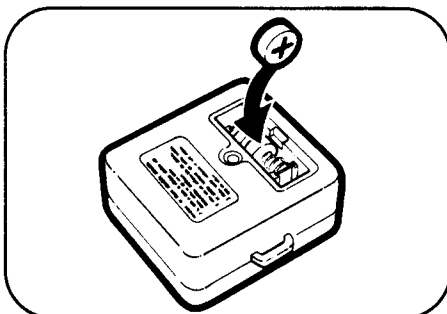

3. Dispose of used batteries properly and insert three new batteries, following direction indicators on outside of compartment door.
4. Refit battery door and retighten screw.

CAUTION:

1. As with all small batteries, the batteries included with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect.
2. When installing replacement batteries make sure the batteries are inserted correctly and follow the toy and battery manufacturers' instructions.
3. Never mix old batteries with new batteries.
4. Batteries may explode or leak if recharged, disassembled or heated.

5. Shake sound unit to check for a sound. (If unit fails to sound, batteries may be incorrectly positioned.)
6. Retie sound unit if untied, and reinsert into pocket, as far in as possible. Close zipper.

Note to parent: Be sure sound unit is tied securely to pocket and tucked into pocket as far as possible. If the sound unit shifts to the bottom of the toy, open zipper and reposition unit deeper into pocket.