

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Baby Mozart © 2001 By The Baby Einstein Company, LLC. All rights reserved.
Baby Einstein and Baby Mozart are trademarks of The Baby Einstein Company, LLC.
Mac is a registered trademark of Apple Computer, Inc.
QuickTime and the QuickTime logo are trademarks used under license.

 
*®, ™ & © 2001 Hasbro, Inc. All Rights Reserved.

5820 P/N 6069960000


baby
mozart™
moving melodies™**

Thank you for choosing this unique Baby Einstein/Playskool learning toy! Together, you and your child can explore the wonders of classical music with the help of the "orchestrating" bear!

Includes 3 "AA" batteries. Phillips screwdriver (not included) needed to replace batteries.

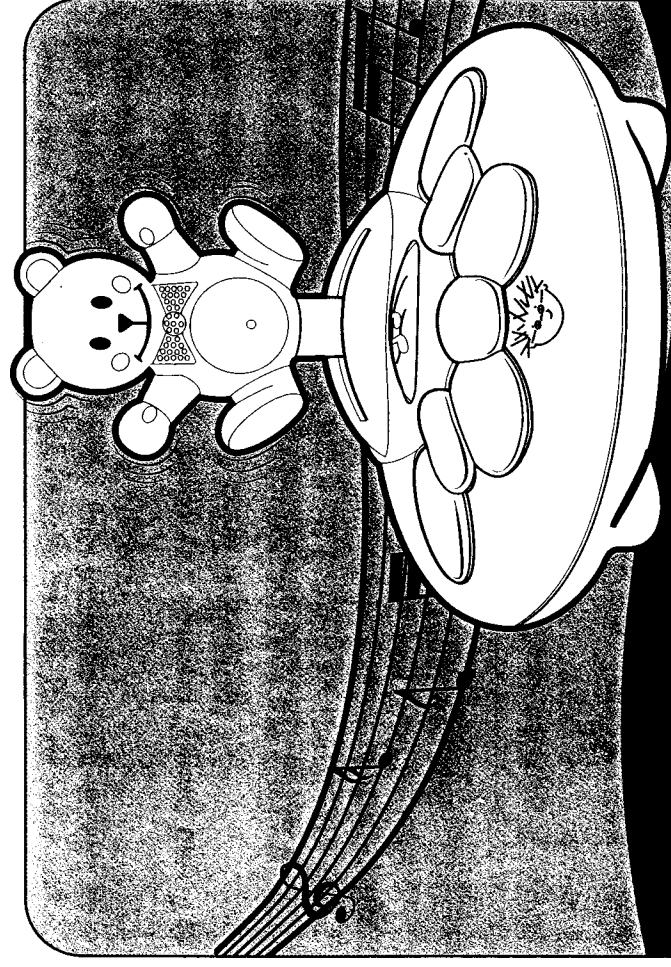


PLAYSKOOL®

 

Assembly

 
Slide post on bear onto tab on unit as shown.

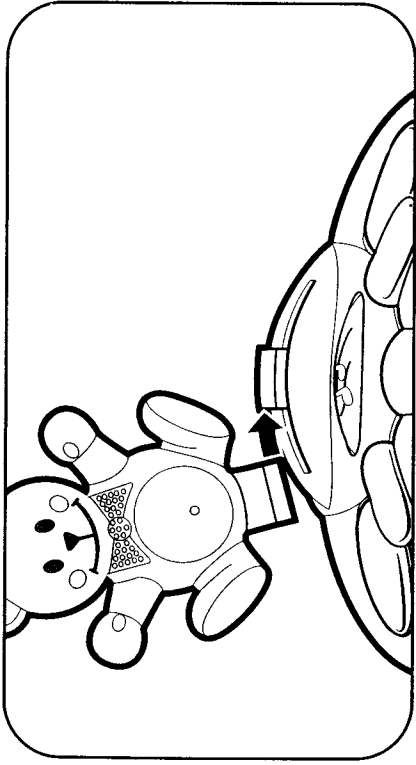

Play features

ADULT PLEASE NOTE: THIS PRODUCT IS SHIPPED IN "DEMO" MODE WITH THE MOTOR OFF TO PRESERVE BATTERY LIFE. MOVE SWITCH ON BOTTOM OF TOY TO "NORMAL" POSITION FOR FULL PLAY AT HOME.

 - Press the oval button in the center of the toy to start the fun! The bear will swing back and forth as baby listens to one of eight different Mozart pieces!
- Play along with the song! Press the colored "piano keys" to play musical notes while the song is playing!
- The music and bear will automatically shut off when a song is completed. Press the oval button to reactivate the toy. To manually turn off the toy while the song is playing, simply press the oval button. Pressing the oval button again will advance the toy to the next melody and note sound.

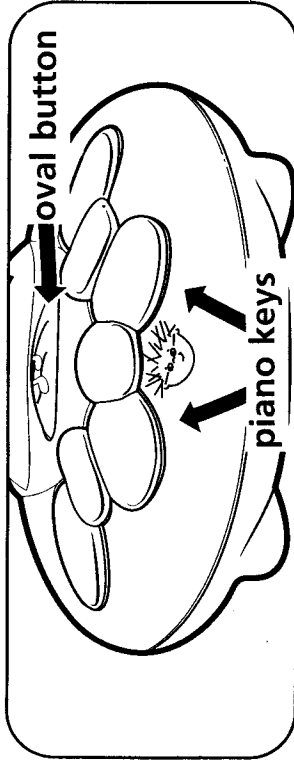

CD operation

To use as a CD-ROM

Insert in the CD drive of your PC or Mac. Launch the file named *Mozart*. Do not transfer software files to your hard drive.

 
Note: QuickTime™ is required to view video clips. QuickTime™ can be downloaded to your computer using the CD and the Internet.

To use as an audio CD

Use this disk in any CD player. A directory of the music tracks can be viewed or printed using your PC or Mac.

To replace batteries

Use a Phillips screwdriver to loosen screw in battery compartment door (screw remains attached to door). Remove door. Insert 3 fresh "AA" alkaline batteries. Replace door and tighten screw.

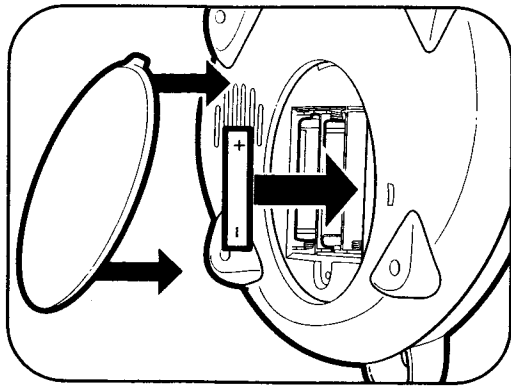

CAUTION:

TO AVOID BATTERY LEAKAGE

- 1) Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- 3) Always remove weak or dead batteries from the product.

