

# Giga Pets®

## I N S T R U C T I O N S

### I N T R O D U C T I O N

many years ago in a fantastic kingdom far away, an evil wizard terrorized the land. the ruler of this kingdom, P R I N C E G I G A, was good and kind, and with the help of the small creatures of the land he banished the terrible wizard. but the wizard enacted a horrible curse, imprisoning all of the small creatures in tiny jeweled pods and scattering them across the universe.

now P R I N C E G I G A'S kingdom is a sad place. each day the prince wanders his kingdom, looking for the jeweled pods so that he may care for the tiny creature trapped inside. only when every G I G A P E T everywhere is healthy and happy can the curse be lifted. can you help?

### C O N G R A T U L A T I O N S !

you are the proud new owner of a G I G A P E T, the take-it-anywhere interactive pet! your new G I G A P E T is going to need lots of attention to grow up healthy and happy. the healthier and happier your pet is, the higher your score will be! these instructions will help you on your way.

### S T A R T I N G T H E G A M E

to start your game, pull the plastic tab from the back of your G I G A P E T. the plastic tab is not part of the toy and should be thrown away. once you turn your G I G A P E T on, it should stay on. you never need to turn your G I G A P E T off.

### S E T T I N G T H E C L O C K

it is very important that you set the clock on your G I G A P E T for the correct time. your G I G A P E T eats, plays, and sleeps according to a natural schedule. if you don't set the time correctly, your G I G A P E T may get confused-- you don't want your pet to sleep all day and keep you awake all night! when you first start the game, your G I G A P E T will be in C L O C K M O D E. here's how to set the clock:

- 1) the H O U R will be flashing, press L E F T / R I G H T to adjust the hour. when the correct hour is set, press E N T E R.
- 2) the M I N U T E S will be flashing, press L E F T / R I G H T to adjust the minutes. when the correct minutes are set, press E N T E R.
- 3) the clock is now set, and you will automatically enter N A M E M O D E.

### N A M I N G Y O U R G I G A P E T

- 1) a flashing bar will appear under the space for each letter.
- 2) press L E F T / R I G H T to search through the alphabet.
- 3) press E N T E R to select a letter and move to the next space in the pet's name. you may use up to 12 letters.
- 4) press E N T E R twice to accept the current name and return to G A M E M O D E.

### T U R N I N G O F F T H E S O U N D

- 1) press M O D E to enter C L O C K M O D E.
- 2) press L E F T to turn the sound off-- the S O U N D I C O N will disappear.
- 3) press R I G H T to turn the sound on-- the S O U N D I C O N will appear again.

press M O D E again to return to G A M E m o d e.

### H A P P Y B I R T H D A Y !

when you enter G A M E M O D E for the first time, you will see the arrival of your new G I G A P E T! every giga pet arrives in a different kind of way. your frog will arrive as a tadpole and swim up to greet you!

### R E T U R N I N G T O C L O C K M O D E

once the game begins in G A M E M O D E, you can return to C L O C K M O D E by pressing M O D E until the clock appears.

- 1) if you wish to adjust the clock, press E N T E R. the clock will start flashing.
- 2) after you set the time, your pet's name will appear. press E N T E R to adjust the name.
- 3) to return to G A M E M O D E, press M O D E until your pet appears again.

### T H E G A M E S C R E E N


the game screen is your frog's "home." you will see the pet move around the screen and go about his daily routine, just like a real pet.

press the L E F T / R I G H T keys to select the different I C O N S around the outside of the screen. these icons represent all of the different activities that allow you to interact with your pet.

### H O W T O P L A Y

just like a real pet, your G I G A P E T needs you in order to grow up happy and healthy. at various times, your pet will require a certain kind of attention from you. your pet will make noise and the A L E R T icon will light up.

now you've got to figure out what your pet needs! if your pet is hungry, feed it. if your pet is lonely, play with it. if your pet is dirty, give it a bath. there are many different ways for you to interact with your pet. the trick is to figure out what your pet needs from you! use the L E F T / R I G H T keys to move to the activity you want, and press E N T E R. here are the activities:

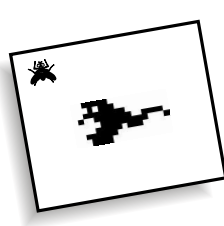


### F E E D

when you select this activity, you will be given a choice of foods for your frog or tadpole. use the L E F T or R I G H T key to select either healthy food or treats. every kind of pet likes different kinds of food. your T A D P O L E needs algae to grow, and small flies to stay happy. when he becomes a F R O G he will need worms to grow, and more small flies to keep him happy.

you can see how hungry your frog is by checking its H U N G E R on the S C O R E screen. a 100 means your pet has a full tummy-- and a 0 means your pet is famished! if your pet has a 100 it may refuse to eat. and if it has a 0 may refuse to do anything else until you feed it!


your tadpole or frog will always eat treats, even when it's full! those flies taste so good, it's impossible to say no! but be careful, too many treats will make your pet fat.

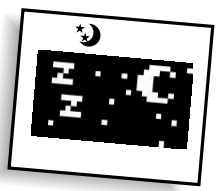

### S L E E P

select this icon to turn out the light when your pet wants to sleep. your pet likes to take naps during the day. if you turn out the light for it, it will happily go to sleep. at night, your pet will be very tired, and just fall asleep right on the floor. if you want your pet to have good dreams, turn out the light at night, too.


sometimes it's hard to tell when your pet needs to sleep if you try everything else-- feeding, playing, or cleaning-- and your pet still seems upset, maybe it's time for a little nap.

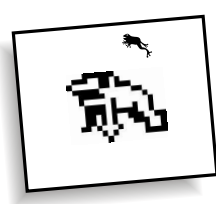

### P L A Y


to keep your frog or tadpole healthy and happy, you should play with it often. when you select this activity, your pet will play a game with you. here's how to play with your tadpole or frog:

press the L E F T and R I G H T keys alternating as quickly as possible to "charge up" the tadpole or frog. you will see the tadpole's tail swishing quicker and quicker; and you will see the frog's body moving as he gets excited and prepares to jump. once the power is fully charged, the unit will beep. press and hold either the L E F T or R I G H T button. if you hold the R I G H T button, the tadpole will swim to the top of the water and leap out; the frog will do a long leap completely off the screen. if you hold the L E F T button, the tadpole will swim loops in the water; the frog will leap straight up and do a backflip. if you do not fully charge your pet before he tries to jump, your pet will get unhappy and fail.

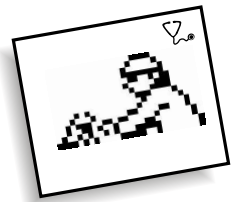

### D O C T O R

if your pet's health drops, you can always try a visit to the doctor. but be careful! there's only so much the doctor can do, and your F R O G does not like to go. we recommend no more than one trip to the doctor each day.

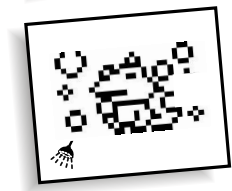

### C L E A N I N G

sometimes your pet will leave droppings, and you must clean them up if there are droppings on screen. select C L E A N I N G to clear them away. if there are no droppings on screen, you can select this activity to give your pet a thorough, all over cleaning. if you want your T A D P O L E or F R O G to stay healthy, don't leave droppings on the screen, and don't forget to give your pet a bath at least once a day.



**SCORE** choose this icon to check on your frog's progress. use the LEFT/RI GHT keys to display screens showing your pets AGE and WEI GHT, HEALTH and HAPPI NESS , HUNGER and DI SCI PLI NE , and TOTAL SCORE. your pet's AGE increases by 1 every day. what seems like a day to you is actually one complete year to your GI GA PET! a GI GA PET reaches adult age at about 5 days, and old age at 14 days. a GI GA PET more than 14 days old is very old indeed!

your pet's WEI GHT will vary depending on your pet's age, diet, and exercise. too many treats and too much sleep will make your pet fat and lazy. make sure your pet gets enough exercise.

HEALTH , HAPPI NESS , HUNGER , and DI SCI PLI NE range from 0 (bad) to 100 (good) and help you determine what your pet needs. if any of these falls below 20, you should take care of your pet right away.


the final statistic, SCORE, is an indication of how well you are doing. the higher your SCORE, the better you are doing. your score is an average of HEALTH, HAPPI NESS, HUNGER, and DI SCI PLI NE.

**TRAI NI NG** your frog or tadpole can do all sorts of interesting things. training your amphibian to perform tricks on command is very entertaining! select the TRAI NI NG icon and press ENTER. the word REWARD will appear. but don't reward your pet yet! first, press LEFT or RI GHT until the word TRI CK appears. now press ENTER again.

a list of tricks will appear. you can press LEFT or RI GHT to search through all the tricks your pet can learn. when you see the trick you want to teach your pet, press ENTER. your pet will try its best to do the trick you asked for.

if your pet does not get the trick right, try again! if your pet does the trick correctly, press ENTER again. the word REWARD should appear. press ENTER again to reward your pet with a treat. now your pet knows this trick. congratulations!

if you want your pet to perform its trick at your command, select the TRAI NI NG icon again. now press either the LEFT or RI GHT key until the word TRI CK appears. press ENTER. now press LEFT/RI GHT until the trick you want appears on the screen, and press ENTER.

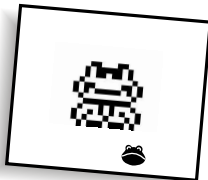

**DI SCI PLI NE** select this activity to discipline your pet. your pet does not like to be disciplined, so you should only discipline your pet if its DI SCI PLI NE falls below 20. don't select this activity too often, or your pet will become unhappy and unhealthy!



**ALERT** when this icon lights up it means your frog needs something. use the SCORE activity to try to figure out what your pet needs: food? sleep? play time? discipline?

**MEETI NG YOUR PET'S NEEDS** if you try to select an activity that your pet does not want to do, it may refuse. try selecting a different activity until you figure out what your pet needs.



**GAME OVER** the game is over when your frog dies. your pet can die from bad health or old age. if your pet dies from bad health, you should restart the game and try again, taking care to pay close attention to your pet's needs.



your pet can also die from old age. your pet is designed to live for about 2 weeks. however, if you take very good care of your pet, it may live longer. keep your pet's health above 95 and it may live indefinitely.


when the game is over, you will see your pet turn into an angel. you can press MODE to see your final SCORE, and press MODE again to see the angel again.

**RESTARTI NG THE GAME**

if your pet dies and becomes an angel, press MODE + ENTER to restart the game. if you just wish to start over from the beginning, press the RESET button located on the back of your game.

**I NSERTI NG THE BATTER IES , DEFECT/DAMAGE, etc**

to activate your giga pets game, pull the plastic tab from back of game. to insert the batteries, remove the battery compartment cover at the back of the game. (to remove cover, unscrew the cover, then push the cover in the direction of the arrow).

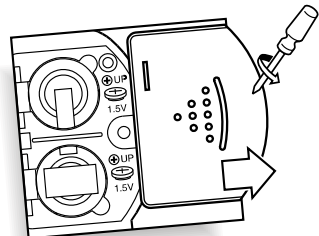

insert two 15v "1r44" or "gBa" button cell batteries (battery included), making sure to align "+" and "-" as shown.

**CAUTI ON:** battery should be replaced by adult. not suitable for children under 36 months, may contain small parts.

**TO ENSURE PROPER FUNCTI ON :**

- do not mix old and new batteries.
- do not mix alkaline, standard or rechargeable batteries.
- battery installation should be done by adult.
- non-rechargeable batteries are not to be recharged.
- rechargeable batteries are to be removed from the toy before being charged (if removable).
- rechargeable batteries are only to be charged under adult supervision (if removable).
- only batteries of the same or equivalent type as recommended are to be used.
- batteries are to be inserted with the correct polarity.
- exhausted batteries are to be removed from the toy.
- the supply terminals are not to be short-circuited.

**DEFECT OR DAMAGE**

if a part of your game is damaged or something has been left out, DO NOT RETURN THE GAME TO THE STORE. the store doesn't have replacement part. instead, write to us at:

**TI GER ELECTRONI C TOYS REPAI R CENTRE**  
980 woodlands parkway, vernon hills,  
illinois 60061, u.s.a.

in your note, mention the name of your game, your game's model number, and tell us briefly what the problem is. also include sales slip, date, place of purchase and price paid. we will do our best to help.

**90-DAY LI MI TED WARRANT Y**

tiger electronics, inc. (tiger) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. this warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

during this 90-day warranty period, the product will either be repaired or replaced (at tiger's option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to tiger.

product returned to tiger without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at tiger's option) for a service fee of us\$4.00. payments must be by check or money order payable to tiger electronics, inc.

**THE FOREGOI NG STATUE THE PURCHASER'S SOLE AND EXCLUSI VE REMEDY FOR ANY BREACH OF WARRANT Y WI TH RESPECT TO THE PRODUCT**

all product returned must be shipped prepaid and insured for loss or damage to:  
tiger electronics, inc. repair dept.  
980 woodlands parkway  
vernon hills, illinois 60061 u.s.a.

the product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

**THI S WARRANT Y I S I N LI EU OF ALL OTHER WARRANTI ES AND NO OTHER REPRESENTATI ONS OR CLAI MS OF ANY NATURE SHALL BE BI NDI NG ON OR OBLI GATE TI GER I N ANY WAY. ANY I MPLI ED WARRANTI ES APPLI CABLE TO THI S PRODUCT, I NCLUDI NG WARRANTI ES OF MERCHANTABI LI TY AND FI TNES FOR A PARTI CULAR PURPOSE, ARE LI MI TED TO THE NI NETY (90) DAY PERI OD DESCR I BED ABOVE. I N NO EVENT WI LL TI GER BE LI ABLE FOR ANY SPECI AL, I NCI DENTAL, OR CONSEQUENTI AL DAMAGES RESULTI NG FROM POSSESSI ON, USE, OR MALFUNCTI ON OF THI S TI GER PRODUCT.**

some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. this warranty gives you specific rights, and you may also have other rights which vary from state to state.