


ELECTRONIC BATTLE GEAR SET INSTRUCTIONS


Remove all pieces from plastic frames If you have difficulty use safety scissors

Includes: Helmet, goggles, pistol, headband liner strap, right & left chin straps, goggles' strap, lens and label sheet. CAUTION: Helmet and goggles are toys. Not for use as protective devices.


6035

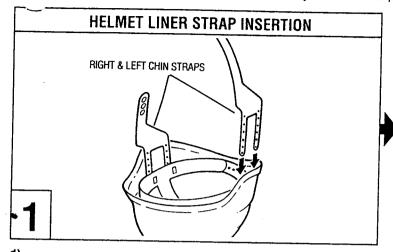


1) Snap right and left chin adjustment straps onto helmet liner as shown.

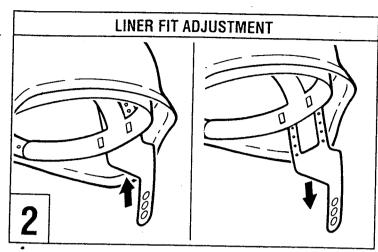


To tighten helmet fit, move side straps upwards. To loosen, move straps downward.

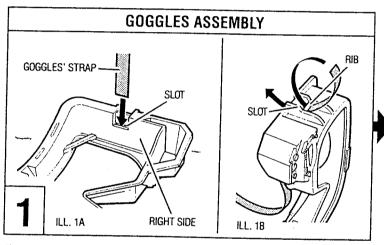

1) Fit one end of goggles' strap through slot located inside right side of goggles. (ILL. 1A) Loop end around rib and back through slot underneath strap as shown. (ILL. 1B) Repeat for other strap end. To adjust fit, pull on excess strap end accordingly.

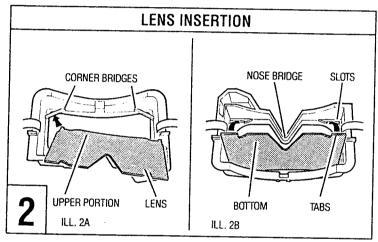


2) Position upper portion of lens under corner bridges. (ILL. 2A) Turn goggles so nose bridge faces upward. Fit tabs on bottom of lens into slots as shown. (ILL. 2B) Snap nose bridge section into place.

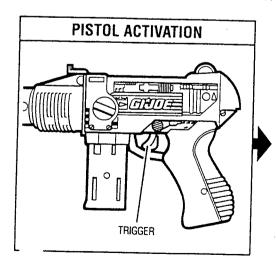


To hear each electronic sound individually, quickly press and release the trigger. To hear the 8 combat sounds in rapid succession, hold your finger on the trigger.

\$1991 Hasbro, Inc., Pawtucket, RI 02862 U.S.A. All Rights Reserved.
MADE IN U.S.A. ELECTRONICS MADE IN CHINA.
6035 P/N 42028900

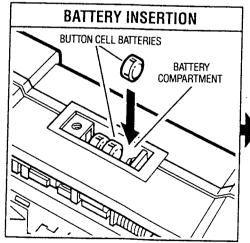

To replace batteries, unscrew battery compartment cover using a Phillips® screwdriver (not included). Insert 3 A-76 button cell batteries into the battery compartment in top of gun as shown. To avoid battery leakage, make sure batteries are properly inserted. Never mix old and new batteries. Place battery compartment cover over compartment and screw into place.

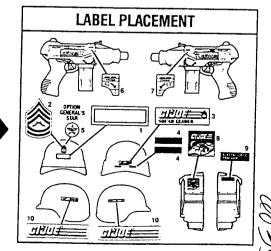

Peel and apply labels as shown. Personalize your helmet by writing your name on the front label.