


Requires 2 x 1.5v "C"/LR14 batteries (not included).
 Phillips/crosshead screwdriver (not included) required
 to replace batteries. See instructions.


Includes vehicle, barrel, antenna, missiles and instructions.

PATRIOT GRIZZLY™ TANK

- 1. JOYSTICK CONTROLS TURRET, GUN STATION AND COMBAT SOUNDS.**
- 2. PUSH TANK FOR ENGINE SOUNDS.**
- 3. MOTORIZED MISSILE-FIRING LAUNCHER**

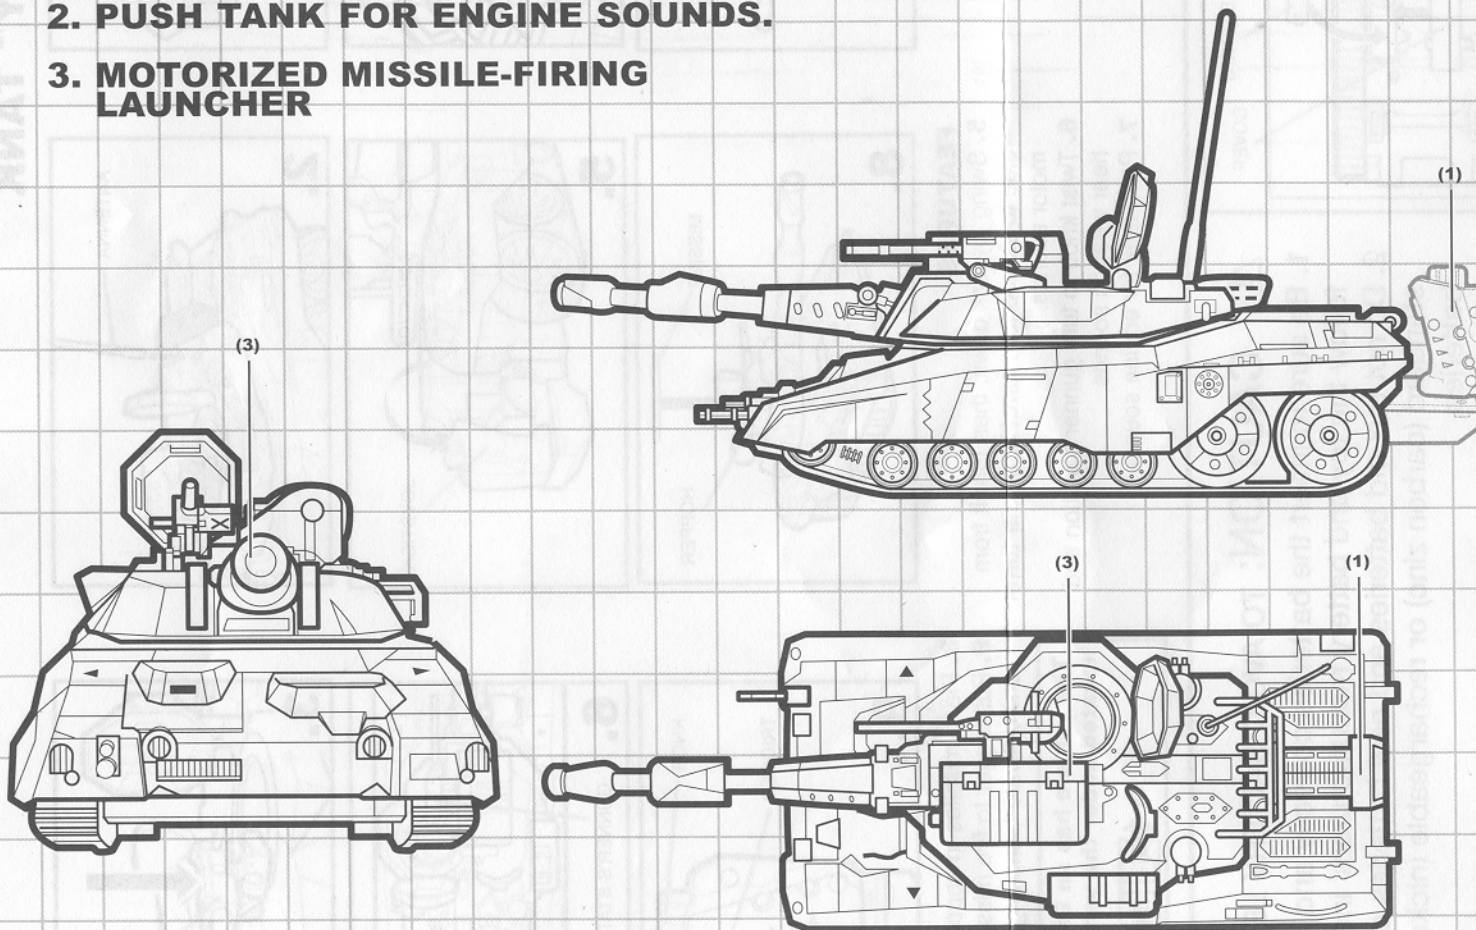


TROUBLESHOOTING TIP

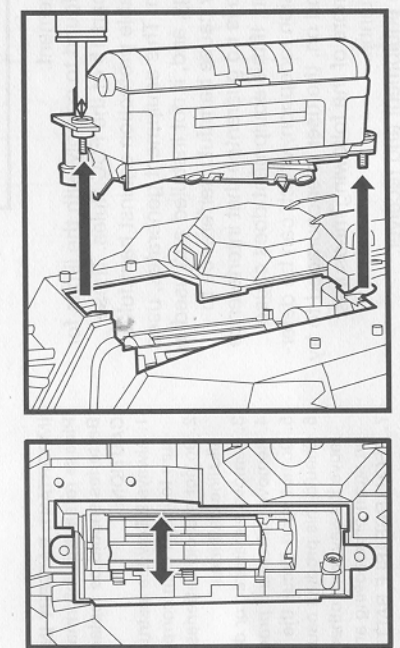


If a missile becomes lodged in the barrel:

- Using a Phillips screwdriver, loosen the 2 screws attaching hopper to vehicle. Remove hopper.
- Turn drum to dislodge missile. Replace hopper and tighten screws.


PATRIOT GRIZZLY™ TANK

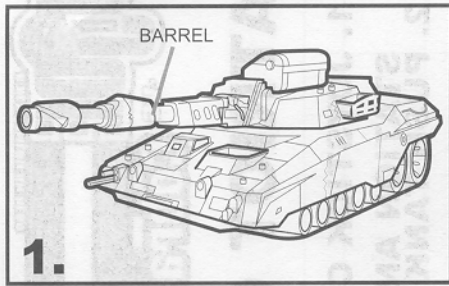


1.

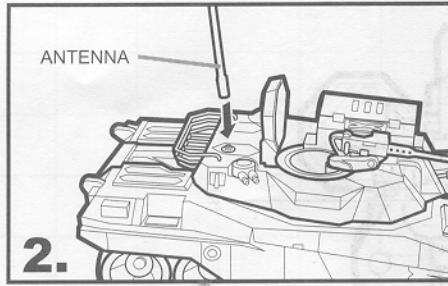


2.

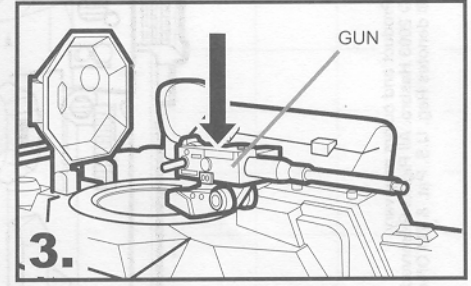


3.

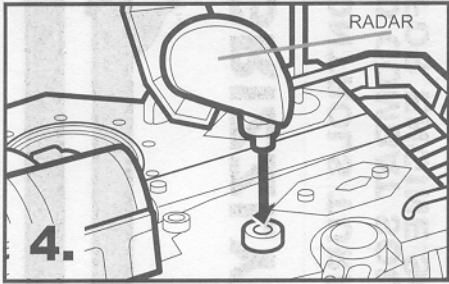


4.

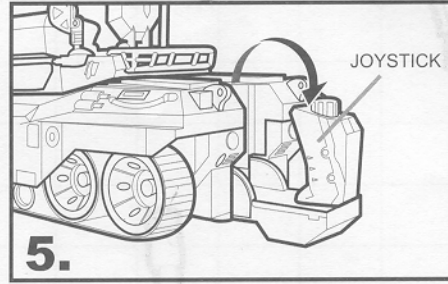


5.

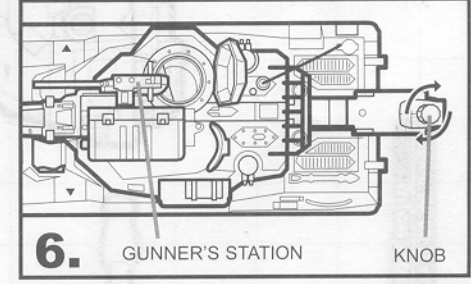


6.

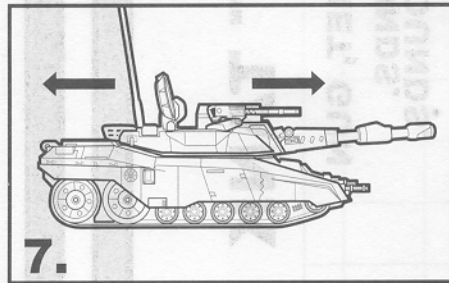

7.

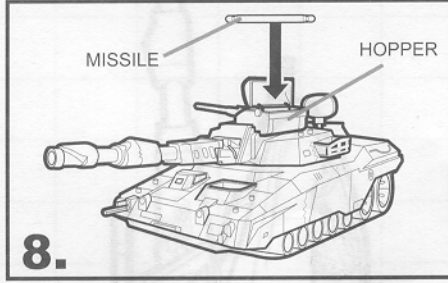

8.

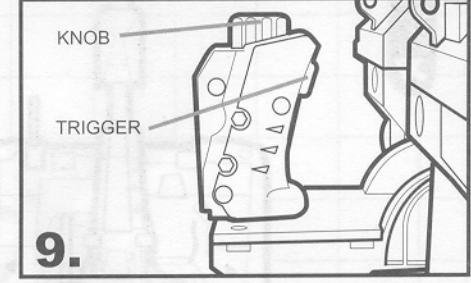

9.

ASSEMBLY

1. Attach barrel as shown.
2. Attach antenna as shown.
3. Attach machine gun as shown.
4. Attach radar as shown.

FEATURES

5. Swing joystick down, then turn it from side to side to turn turret and hear turret motor sounds.
6. Twist knob to turn gunner's station and hear weapon sounds.
7. Push tank for engine sounds.


8. Place missiles in hopper.
9. Pull trigger to fire missiles from launcher and activate launching sounds.

The vehicle has an ON/OFF switch located under the vehicle.



To replace batteries:

Using a Phillips/crosshead screwdriver (not included), loosen screw in battery compartment cover. Remove cover. Insert 2 x 1.5v "C"/LR14 batteries. Alkaline batteries recommended. Replace door, and tighten screw with screwdriver. See diagrams for polarity.

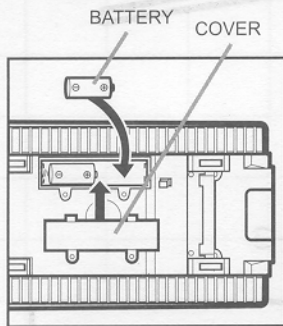

CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
2. Do not mix old batteries and new batteries or alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.
3. Always remove weak or dead batteries from the product.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.

Batteries should be replaced by an adult.

CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERY.