

INSTRUCTIONS

1. TWO GREAT WAYS TO WIN!

Welcome to the greatest slots game you've ever held in your hand. Unlike other slots games, there are **TWO** great ways to win. Win on the center payout line **AND** win on the Wheel of Fortune wheel! Whenever you roll a SPIN icon on the center payout line, you're given a free spin on the Wheel! If you roll two SPIN icons, then you get two spins on the Wheel! Roll three SPIN icons, then you get three spins on the Wheel!

2. IT TALKS!

Your Wheel of Fortune slots even talks to you! It tells you to "Place your bets!" with one, two, or three coins! When you roll a SPIN icon, the voice will tell you to "Spin the Wheel!"

3. PROGRESSIVE SUPER JACKPOT

The **PROGRESSIVE SUPER JACKPOT** screen starts at \$5000 when play begins. However, whenever a player loses money, the lost money automatically is added to the super jackpot.

There are two ways to win the **SUPER JACKPOT**:

- If a player rolls three Wheel of Fortune symbols on the regular payout line with 3 coins played, they win the progressive (**SUPER JACKPOT!**)
- If player spins the Wheel of Fortune Wheel and spins the Super Jackpot symbol, they also win the super jackpot!

When the Super Jackpot is won, the on-screen super jackpot resets at \$5,000.

4. PAYOUT CHART

The amounts won on the payout line are determined based on the symbols and the number of coins bet: 1 coin, 2 coins or 3 coins. (You also win money each time you roll a SPIN icon and get to spin the wheel!)

 
	1 COIN	2 COINS	3 COINS
3 Wheel of Fortune icons			
SUPER JACKPOT! (Progressive!)	2000	4000	5000
Blue Diamonds	1000	2000	3000
"7's"	100	200	300
3 Single Bars	10	20	30
3 Spins	5	10	15
2 Single Bars and 1 Spin icon	5	10	15
2 Spin icons	2	4	6

Remember that in addition to the coins won when player rolls a SPIN icon, they also get to spin the Wheel of Fortune wheel for additional money!

5. FASTER PLAY

For players desiring faster play, the game has a special **MAX BET** feature. With the press of a single button, the player can place the maximum bet and play the slots. See "How to Play" below.

6. HOW TO PLAY

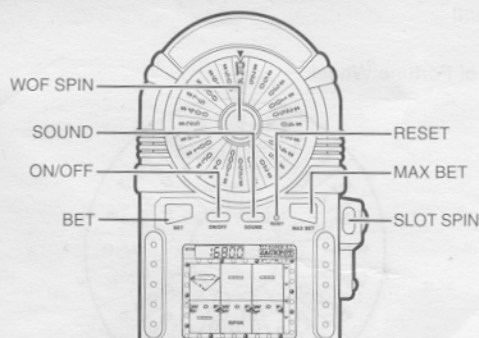

ON/OFF

- to turn on the unit.
- to turn off the unit.

SOUND

- to toggle the sound: on/off

BET

- to bet a coin. Each press of the button will bet another coin, up to a maximum of 3 coins.

MAX BET

- to bet the maximum amount (3 coins). This will spin the symbols along the payout line automatically.

SLOT SPIN

- to spin the reels along the payout line (after placing your bet).

WOF SPIN

- to spin the Wheel of Fortune wheel (if you acquire one or more SPIN icons on the payout line).

MAX SCORE

- to view the maximum score achieved on the unit.
- to see the amount accumulated in the super jackpot.

RESET

- to reset the unit if the game malfunctions.

Press the **ON** button to turn on the unit. On screen will appear your current score and the number of dollars accumulated in the jackpot. If this is the first time you are playing, you begin play with \$200 and with \$5000 in the super jackpot.


A voice will call out, "PLACE YOUR BETS!"

Press the **BET** button to place your bet from 1 to 3 coins. Each time you press the **BET** button, 1 coin will "drop" into the slots! If you make a mistake (before pressing **SPIN**), just press **BET** until the amount you want to bet appears.

When you have placed your bet, press the **SLOT SPIN** to get the reels along the payout line rolling!


For faster (and riskier!) play, you can press the **MAX BET** button instead of the **BET** button. You are now automatically betting the maximum amount of 3 coins and spinning the reels along the payout line automatically, all with the single press of this button!

Once **SLOT SPIN** has been activated, you will see the symbols spinning along the payout line. When the symbols stop, look to see which symbols are lined up at the **CENTER LINE**. If any of the combinations appearing in the payout chart show up at the center line, you **WIN**.

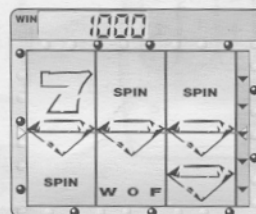

Remember, you win based not only on winning combinations, but also on how much you bet. Check the payout chart as well as the unit itself for the exact amount!

The Wheel of Fortune Wheel:

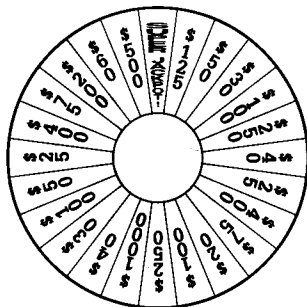

If you happen to roll a SPIN icon on the center line of the payout line, then you will hear a voice call out, "SPIN THE WHEEL!". Now press the WOF SPIN button located on the center of the wheel — and this sets the Wheel of Fortune wheel spinning! You win the dollar amount shown on the wheel!

If one SPIN icon appears on the center line of the payout, you spin the Wheel of Fortune wheel one time. But if TWO SPIN icons appear on the center line, you spin the Wheel of Fortune wheel TWICE. If THREE SPIN icons appear on the center line, you spin the Wheel of Fortune wheel THREE times. (This is in addition to the money you automatically win based on the payout chart.)

In the Wheel of Fortune television show, the harder you spin the wheel, the longer the wheel spins. Your slots game works the same way! The longer you hold down the SPIN button, the longer the wheel will spin!

Progressive Super Jackpot:

Every time you make a bet and lose, that money is added to the super jackpot. You win the entire amount in the Super Jackpot by rolling 3 Wheel of Fortune icons on the center line of the payouts OR by spinning the Wheel of Fortune wheel and spinning the SUPER JACKPOT sign on the wheel!

You can press the **MAX SCORE** button at any time to see the maximum amount won on your slots game and the amount currently in the Super Jackpot.

When you turn off the game, the unit will remember the total amount you've won, the maximum amount won and the amount of money accumulated in the super jackpot. So when you turn the unit back on, these three factors (your winnings, the max score, and the super jackpot total) will all still be stored.

The unit shuts off automatically after 3 minutes of no action but retains your total winnings, the maximum score and the amount currently in the progressive super Jackpot!

You will lose your winnings, max score, and jackpot total whenever you change batteries in the unit or whenever you press the **RESET** button.

When you run out of money, press the **ON** button to start a new game. The game will automatically reset with you having \$200 to wager and with the Super Jackpot adjusted back to the starting level of \$5000.

8. CAUTION/DEFECT AND DAMAGE



Clean only with a piece of soft dry cloth.



Do not use a pencil or pin to press the reset button. Use a ball-point pen.



Do not press the liquid crystal display (LCD screen) and avoid heavy shock or the display may fail.



High temperature will destroy the unit. Do not leave unit in direct sunlight.

To ensure proper function:

- Do not mix new & old batteries.
- Do not mix alkaline, standard or rechargeable batteries.
- Battery installation should be done by an adult.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (If removable).
- Rechargeable batteries are only to be charged under adult supervision (If removable).
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short circuited.

9. 90-DAY LIMITED WARRANTY

Tiger Electronics, Ltd. (Tiger) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at Tiger's option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to Tiger.

Product returned to Tiger without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at Tiger's option) for a service fee of U.S. \$13.00. Payments must be by check or money order payable to Tiger Electronics, Ltd.

The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.

All product returned must be shipped prepaid and insured for loss or damage to:

Tiger Electronics, Ltd. Repair Dept.
980 Woodlands Parkway
Vernon Hills, Illinois 60061, U.S.A.

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

For more information about Tiger Electronics, our products and special promotions, please visit our web site at www.tigertoys.com.

TIGER
ELECTRONICS, LTD.

WHEEL OF FORTUNE is a registered trademark of Calton Productions, Inc.
© 1998 Calton Productions, Inc. All Rights Reserved.
©, TM, & © 1998 Tiger Electronics, Ltd. All rights reserved.
980 Woodlands Parkway, Vernon Hills, Illinois 60061
PRINTED IN CHINA

075340001IWT1-01
01-LP070-9001

7. INSERTING THE BATTERIES

To insert the batteries, remove the battery compartment cover at the back of the unit by pushing in the direction of the arrow. Insert 4 X AA/"LR6" batteries or equivalent(not included) making sure to align "+" and "-" as shown.

