Tonka XT | RICOCHET STUNT PRO R/C

PRO TRICK LIST

SEE IF YOU CAN PULL OFF THESE STARTER TRICKS!
ONCE YOU'VE GOT THESE PERFECTED, GO CREATE YOUR OWN!

BUZZSAW SPIN

DRIVE FORWARD AT TOP SPEED, THEN TURN SUDDENLY IN ONE DIRECTION TO DRIFT THROUGH THREE SPIRALS.

RAMPAGE FLIP

REVERSE DIRECTION AT TOP SPEED TO FLIP OVER WHILE KEEPING BOTH REAR WHEELS ON THE GROUND.

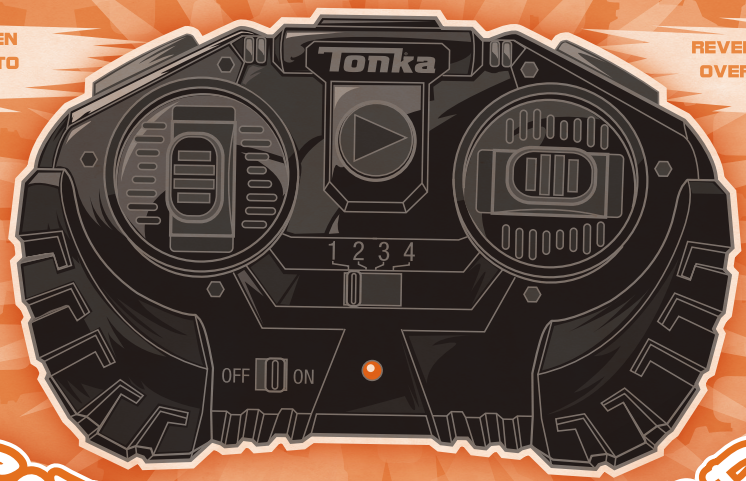

RIC-TWIST

BRAKE AND TURN SUDDENLY TO FLIP OVER WHILE KEEPING BOTH WHEELS ON ONE SIDE ON THE GROUND.

8BALL DRIFT

DRIVE FORWARD AT TOP SPEED, THEN DRIFT THROUGH TWO FULL CIRCLES IN OPPOSITE DIRECTIONS TO MAKE A FIGURE-8.

Tonka XT | RICOCHET STUNT PRO R/C

AGES 8+

2.4GHz

32781 Asst.

QUICK START GUIDE

PLEASE READ ALL INSTRUCTIONS BEFORE OPERATING THIS VEHICLE FOR THE FIRST TIME.

1. INSERT BATTERIES INTO CONTROLLER.
2. CHARGE AND INSTALL VEHICLE BATTERY.
3. SWITCH THE CONTROLLER TO ON.
4. SLIDE THE VEHICLE'S POWER SWITCH TO ON.

USING THE REPLAY REMOTE

1. SLIDE THE SWITCH TO CHOOSE A SAVE SLOT. EACH SLOT CAN HOLD ONE STUNT AT A TIME.
2. PRESS AND RELEASE TO START RECORDING.
3. PRESS AND RELEASE TO SAVE RECORDING.
4. PRESS AND HOLD TO REPLAY.

BE CAREFUL!

WHEN YOU PRESS RECORD, ANY STUNT SAVED IN THE SELECTED SAVE SLOT WILL BE REPLACED WITH A NEW RECORDING!

VISIT TONKA.COM

Hasbro

Product and colors may vary.
© 2011 Hasbro, Pawtucket, RI 02862 USA. All Rights Reserved.
TM & ® denote U.S. Trademarks.
Patent Pending. PN: 7189130001