

Lay the stencil over a sheet

of paper, in the tray with



Hold sprayer away from stencil 3 to 4 inches to create airbrush effect. Concentrate spray into only the cut out area of the stencil. When spray "starts to spatter" pump tank 40-50 more strokes. Keep caps on pens when they are not in use.

Press trigger down to spray.


NOTE: If pen doesn't work, rotate pen 1/2 turn to other side. If ink becomes lighter. check to make sure tank is pumped fully. The more you pump, the more you spray.




the cut out corner over the finger hole. NOTE:

Super graphics stencils do not have notches.



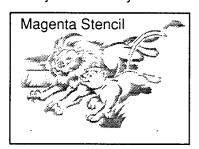

Spray magenta on stencil marked "Magenta Stencil". Remove stencil..

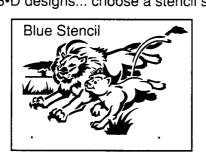

If necessary, now pump again. Spray blue on stencil marked "Blue Stencil". Remove stencil.



If necessary, pump again. Freehand spray yellow where desired. Be careful not to spray over red and blue areas to avoid affecting the 3.D.



design with your special 3.D glasses.

Or make conventional Colorblaster designs with regular Colorblaster stencils.

TROUBLE SHOOTING TIPS

PROBLEM

SOLUTION

Tank will not pressurize.

Check to be sure the cap is on tight, with "O" Ring in place and hose connected to sprayer.

•A hissing sound is heard.

Check for air leaks and tighten all connections.

•Air does not come out of sprayer.

Depress trigger while pumping until air flows. Pump tank 50 strokes and try again.

 Pen stops working, but air still comes out of sprayer.

Rotate pen 1/2 turn to other side. Pump again and retry pen. If pen is dried up, replace pen. Keep cap on pen when not in use. Let pen sit overnight and try it again making sure pen is properly aligned and tank is pumped fully, before discarding pen.

·Pens foaming.

Make sure pen is properly aligned to sprayer.

•Ink becomes light or begins to fade.

Check to make sure tank is pumped fully; if not, 40 more strokes. make sure pen is properly aligned.

WASHING INSTRUCTIONS

DO NOT USE HOT WATER OR CLEANING SOLUTIONS to clean COLORBLASTER ink from carpets or fabrics. For best results, blot exess, scrub carpet with stiff brush, mild detergent and COLD water. Repeat, if necessary. Machine or hand wash fabrics in detergent and COLD water. Line dry. Repeat, if necessary.

QUESTIONS CALL 1-800-327-8264.

