



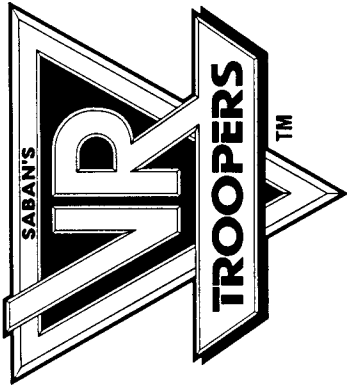


SKYBORG JET™ INSTRUCTIONS

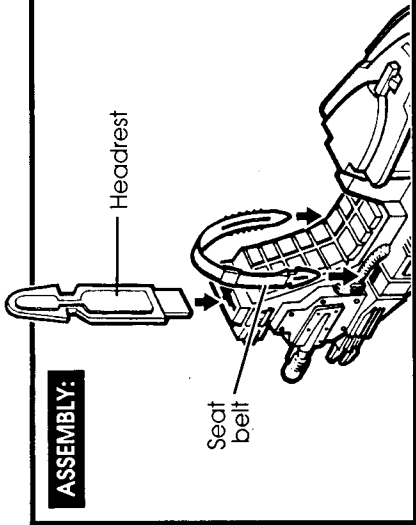


ASSEMBLY:


1 Snap end of seat belt into slot as shown. With flat surface facing forward, snap headrest into hole in rear of body.

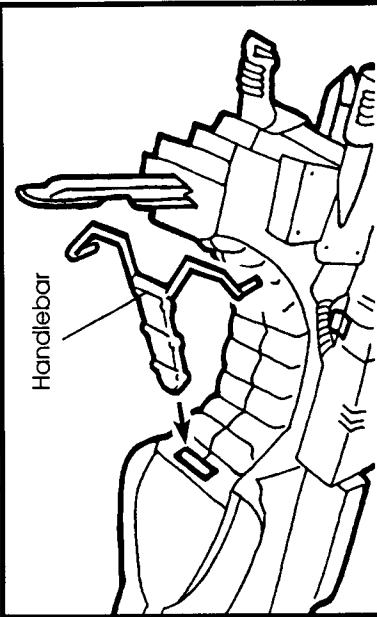


2 Slide handlebar into hole in front of body until it snaps into place.

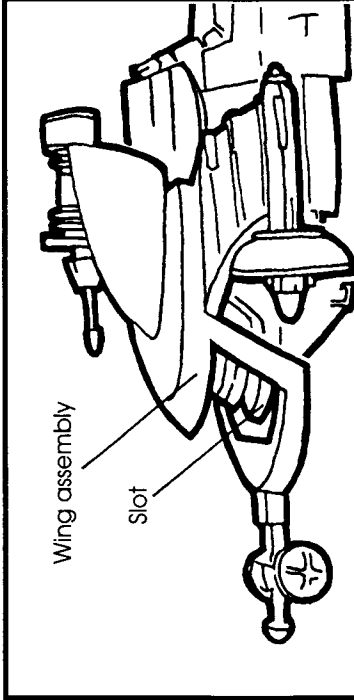


3 Slide front of wing assembly into front slot in body as shown. Push wing assembly down and back until it slides over front grill on both sides of body and snaps into place.

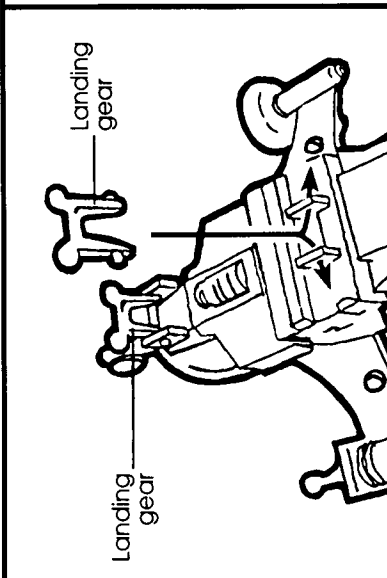

4 Snap landing gear into brackets on underside of body.

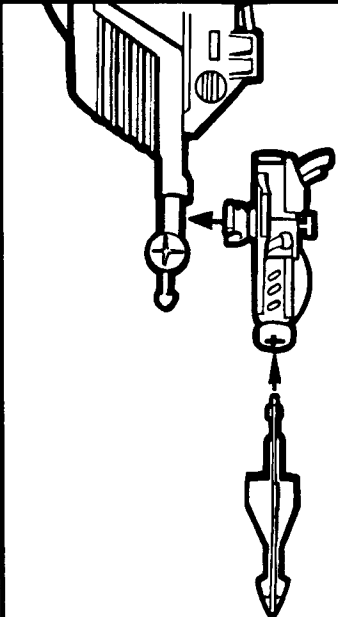


5 Clip missile launcher onto front of jet. Load missile into launcher as shown.

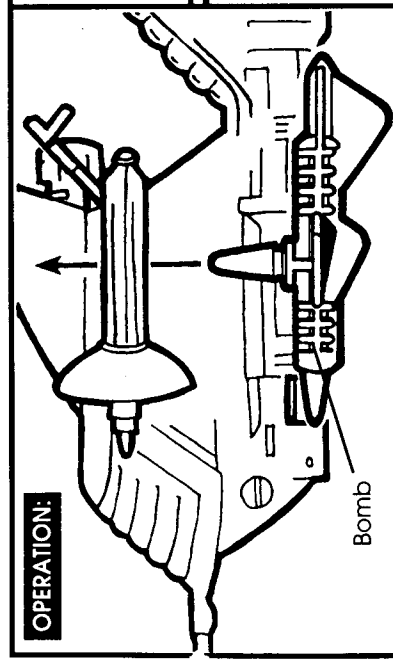


OPERATION:


6 From the underside, insert bombs into holes in wing.

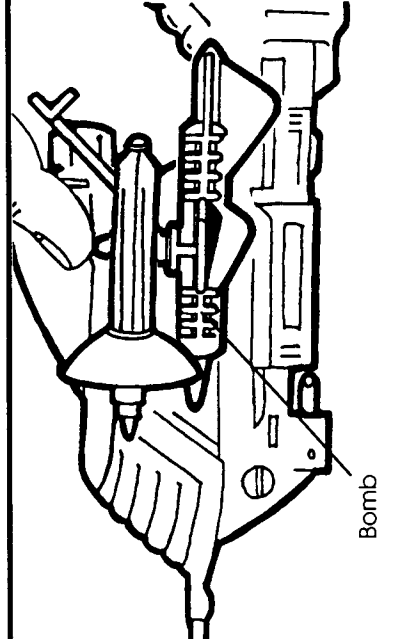

7 Drop bomb by pushing down from the top side of wing until it fires.

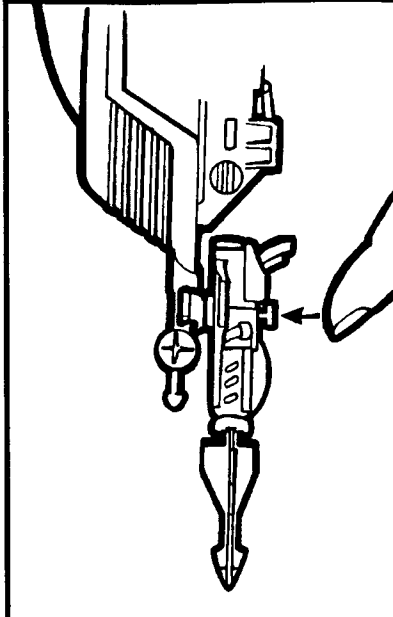


8 Push firing button on underside of missile launcher to fire missile.

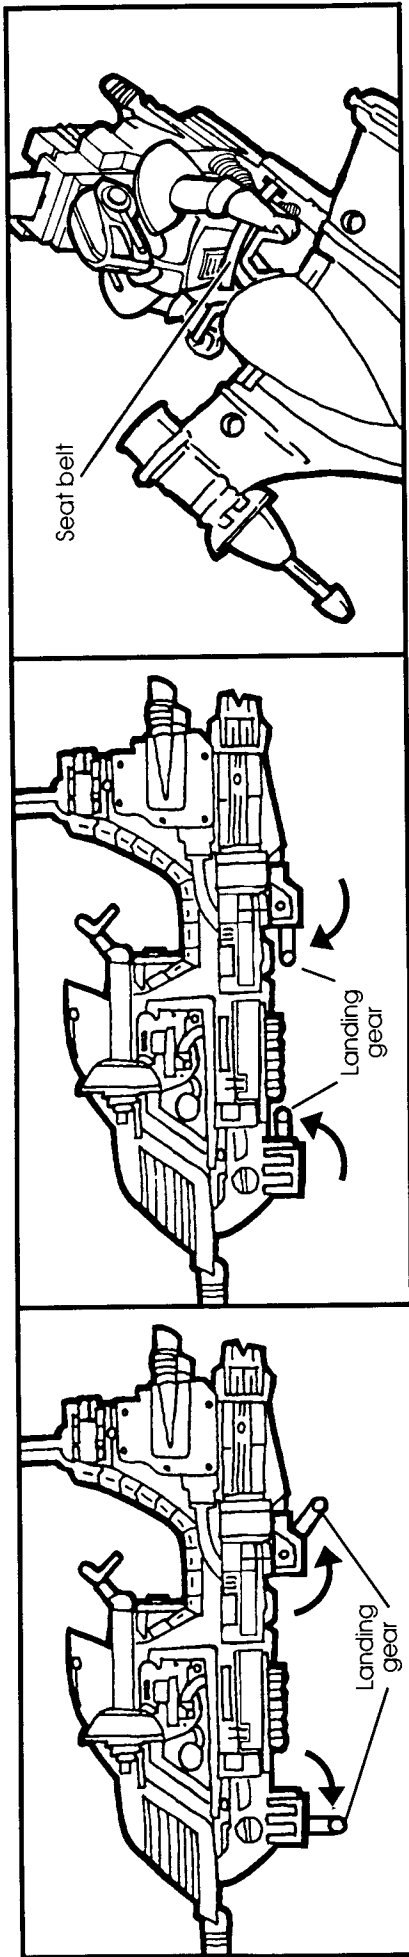

10 Most VR Troopers™ figures can sit in the cockpit. Insert loose end of seat belt into slot in seat to secure figure.

9 Vehicle can stand by swinging landing gear to the down position as shown. Fold them in and out of the way when the Skyborg is "flying."

11 Apply labels using the numbers on the label sheet and these illustrations as a guide.

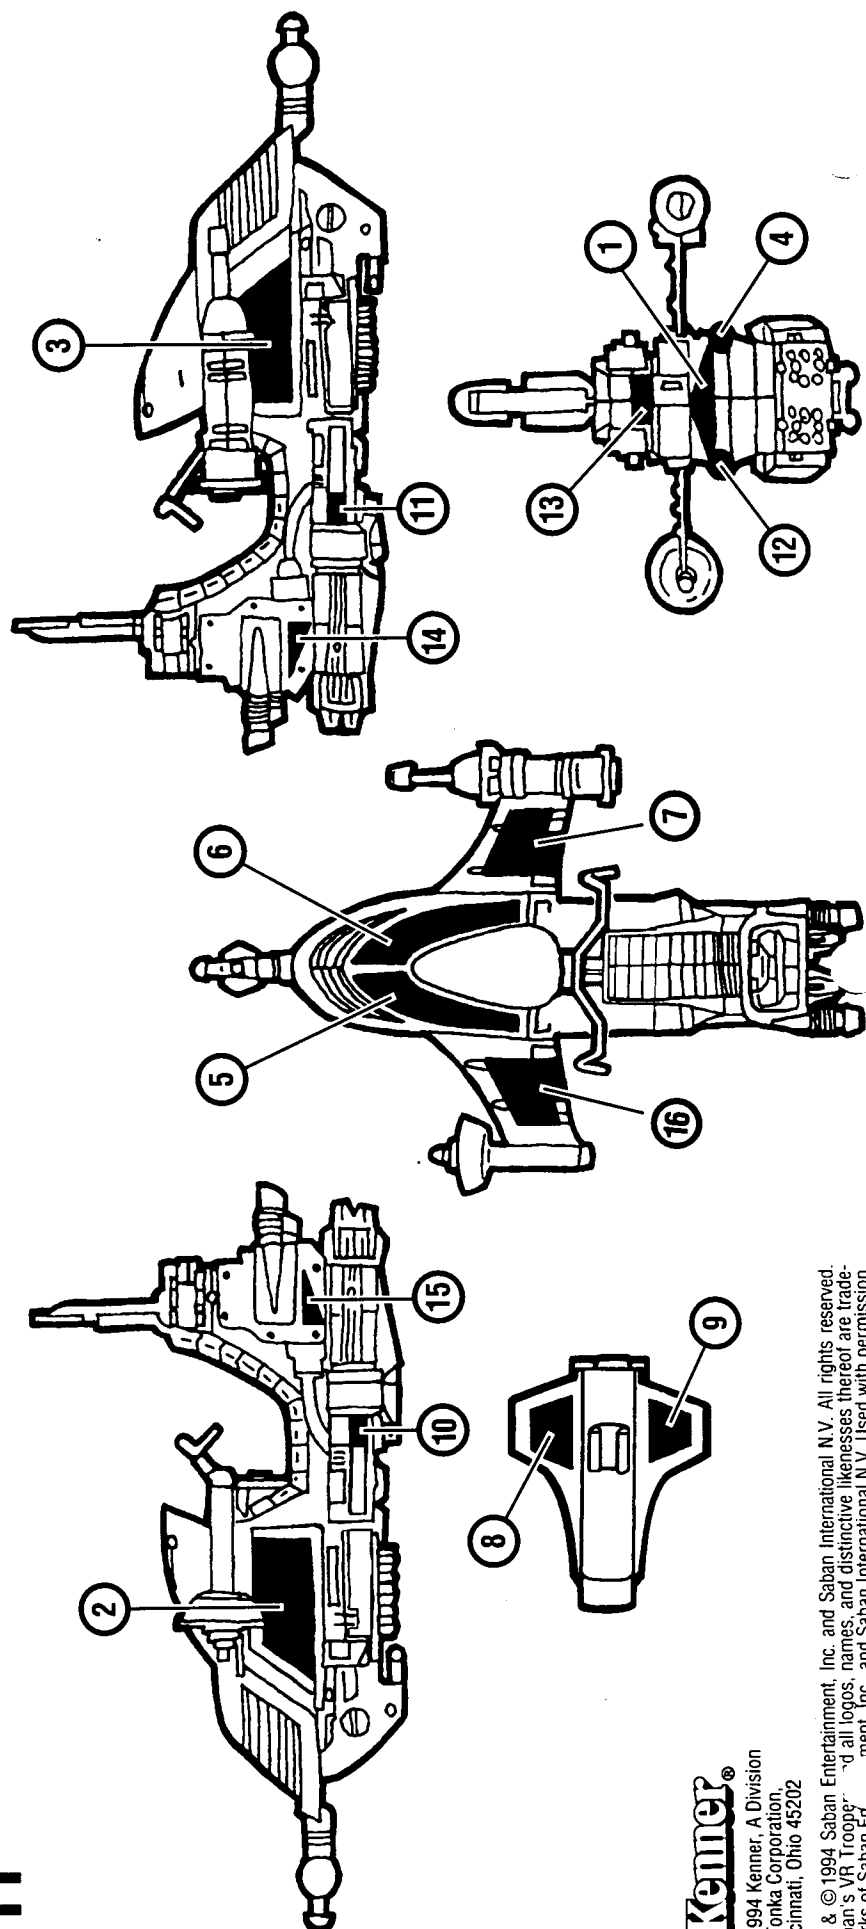

Kenner®

© 1994 Kenner, A Division of Tonka Corporation, Cincinnati, Ohio 45202

TM & © 1994 Saban Entertainment, Inc. and Saban International N.V. All rights reserved. Saban's VR Troopers™ and all logos, names, and distinctive likenesses thereof are trademarks of Saban Entertainment, Inc., and Saban International N.V. Used with permission.