


airtrix™

ASSEMBLY DIRECTIONS

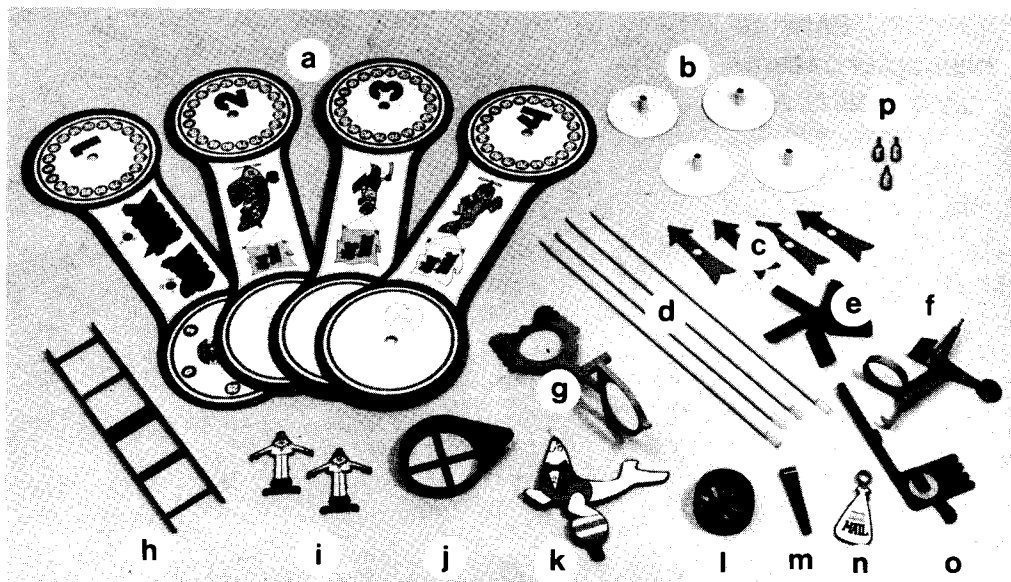


a. CARDBOARD PIECES
 b. BASES
 c. ARROWS
 d. RODS
 e. PROPELLER
 f. HELICOPTER BODY
 g. WEATHERVANE
 h. LADDER


i. FIREMEN
 j. CUP
 k. SEAL
 l. BARREL
 m. MAIL HOLDER
 n. MAILBAG
 o. HAND
 p. THREE POINTED TIPS

**Prior to assembling
item, apply pres-
sure sensitive
labels to the seal,
firemen and
mailbag.**


**If label wrinkles or
goes over the edge,
it will not affect
the play.
Press it smooth
around the edge.**

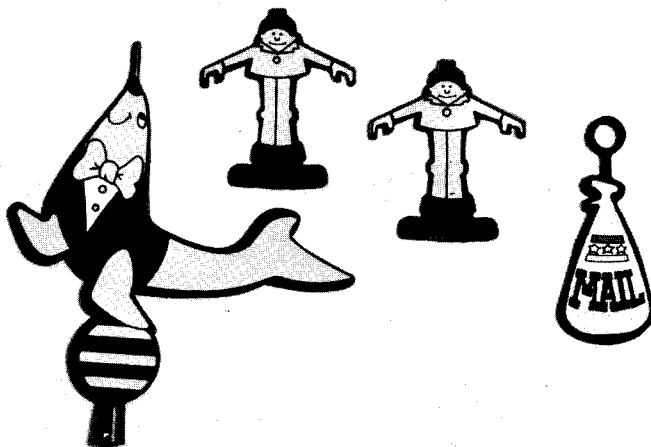


**1. Position
cardboard pieces
so colored #1 is
over plain #1, 2
over 2, etc.
Refer to box cover
illustration.**

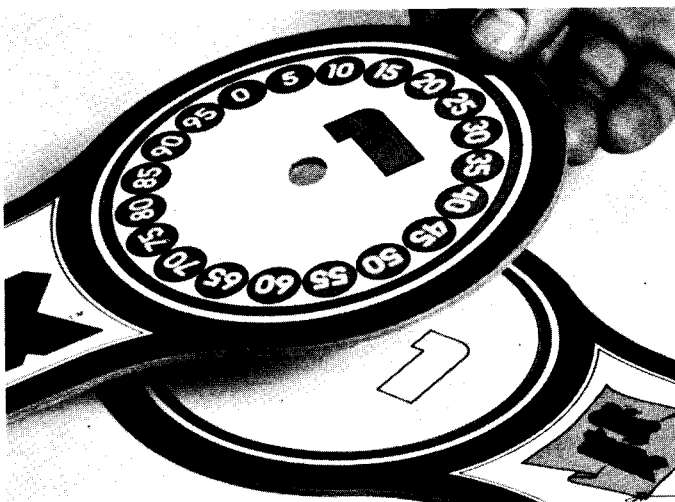

**2. Insert round
bases from under-
neath so collar
protrudes through
cardboard.**

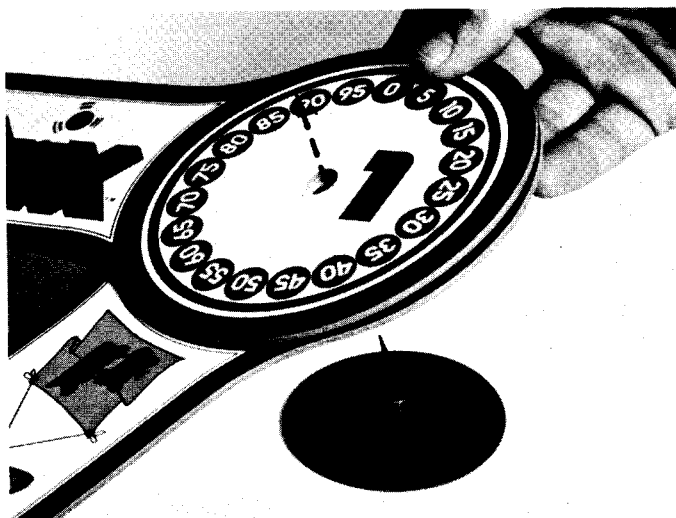


**3. Place arrow
over each protrud-
ing collar.**

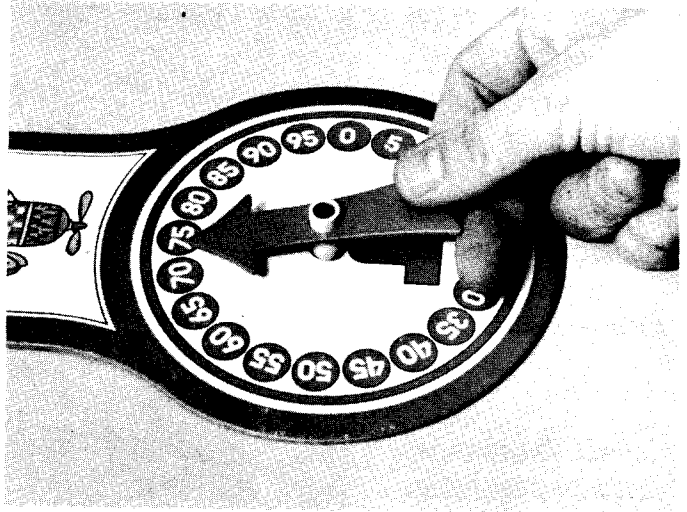


**4. THE
LADDER:**


**a. Place pointed
plastic tip on rod.**

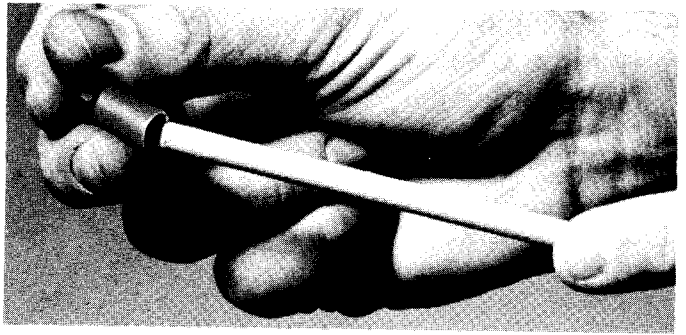


**b. Insert rod with
pointed end up into
base #1.**

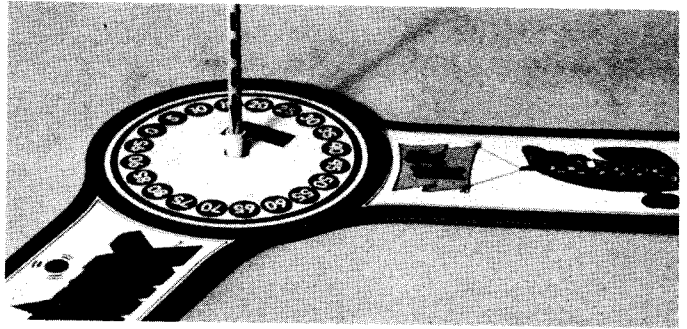

**c. Balance ladder
on point of rod.
Point should go
into center hole
of ladder.**

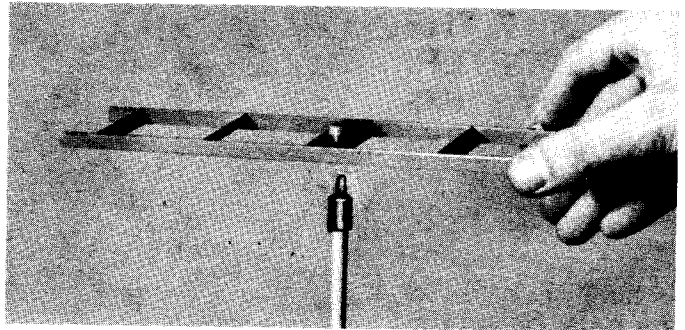


- d. Position a fireman at each end of the ladder.

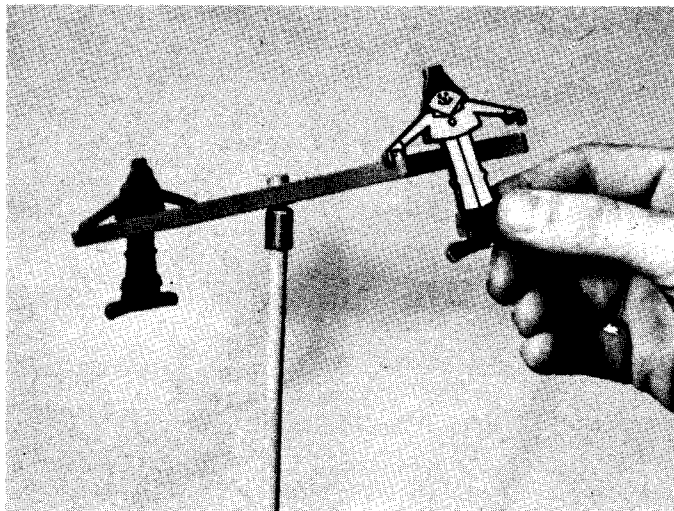


5. THE SEAL:

- a. Insert rod without point into base #2.
b. Place seal on top of rod.

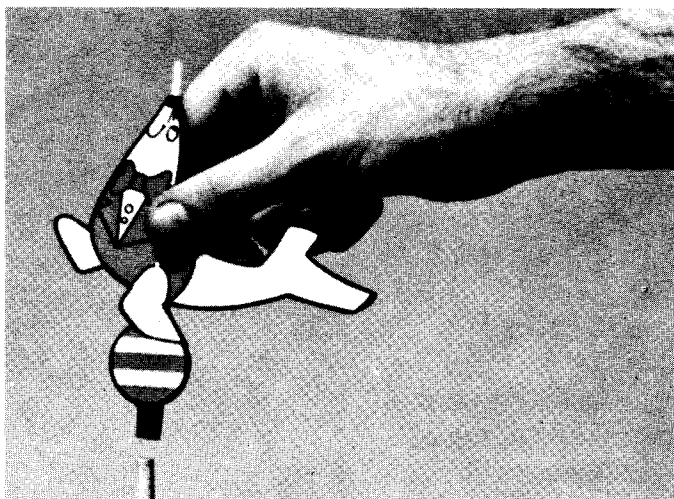


- c. Place barrel on seal's nose.

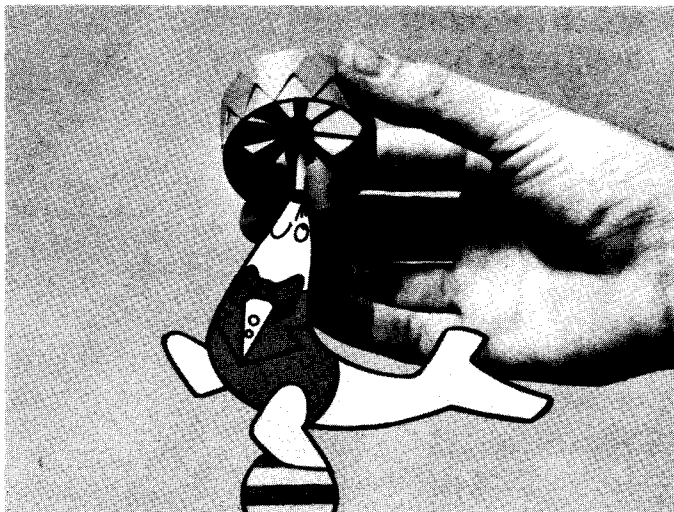


6. THE WEATHERVANE:


- a. Insert rod without point into base #3.
- b. Slide cup down rod about 3 inches.
- c. Then place pointed plastic tip on rod.

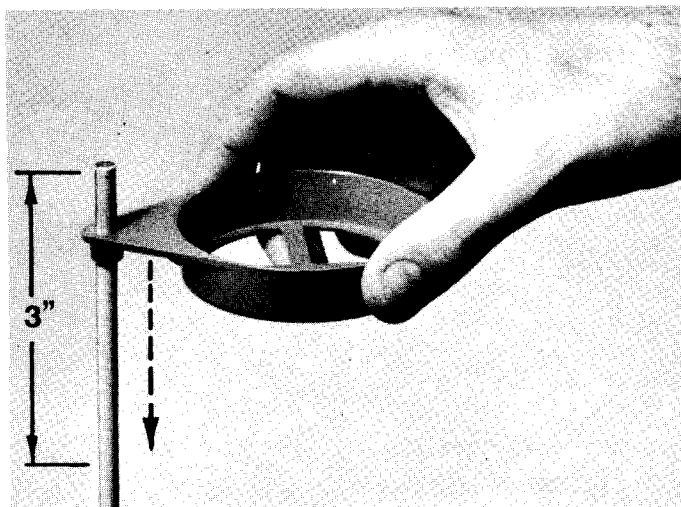

- d. Assemble arrowhead and tail of weathervane.

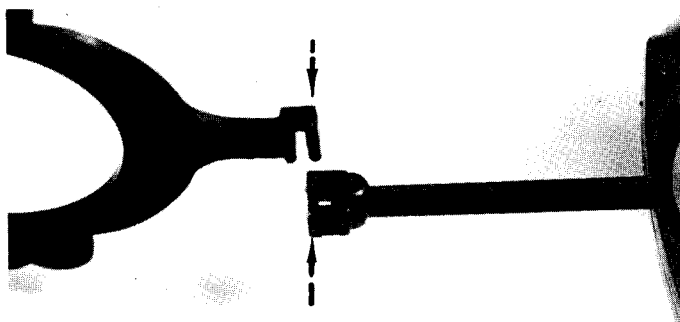


- e. Place weathervane on top of rod.

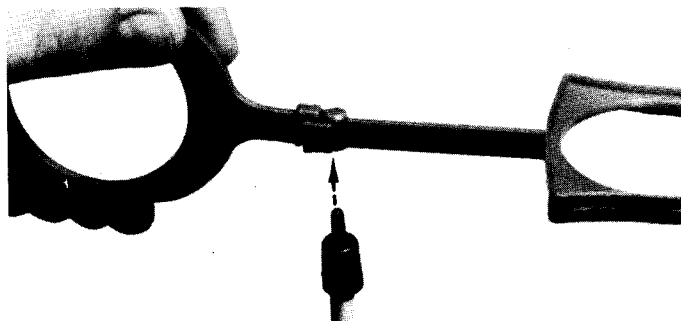


7. THE HELICOPTER:

- a. Insert rod without point into base #4.
 - b. Slide mail holder down rod about 3 inches.
- Flat edge with two bumps must be on top.

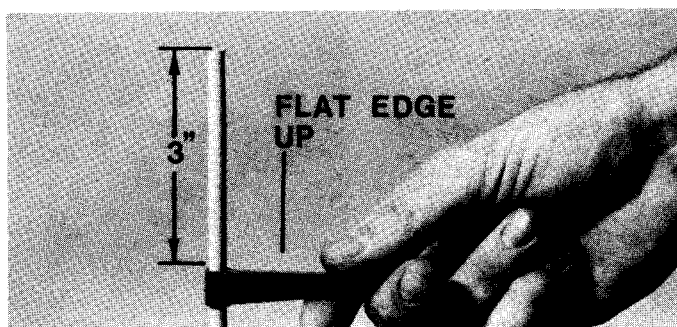


- c. Place pointed tip
on rod.
- d. Push weight
into hand.

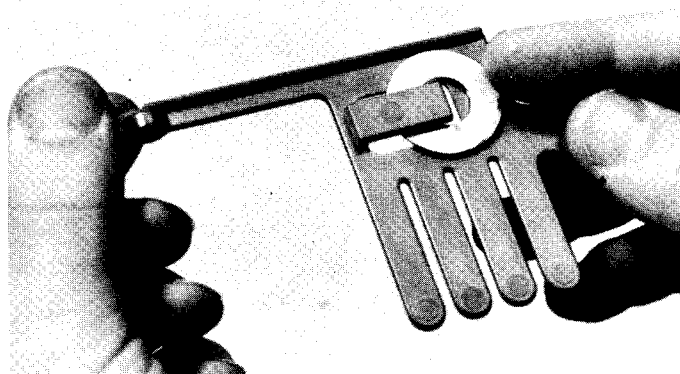


- e. Push "cockpit"
(ball hoop) onto
helicopter body.




- f. Attach helicopter
body to the hand
piece.

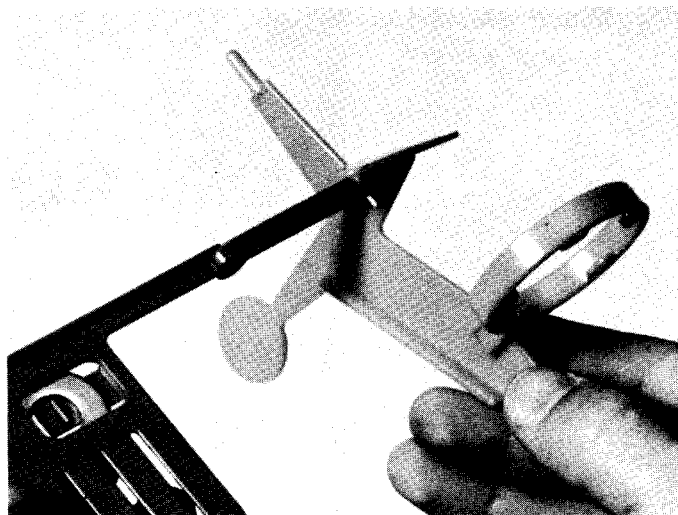


- g. Place propeller on helicopter.**

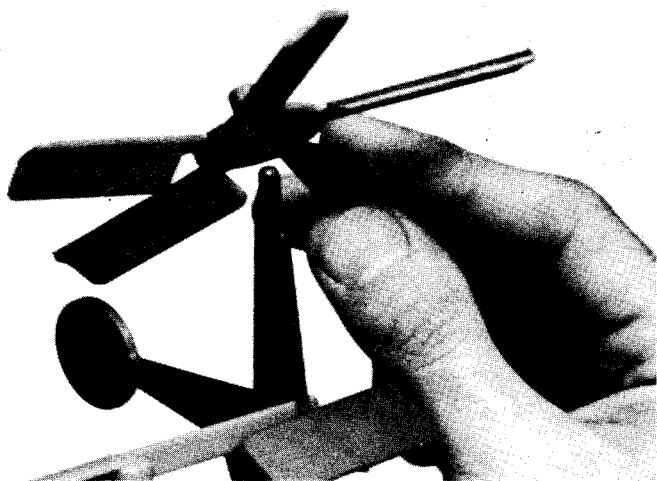


- h. Balance helicopter assembly on top of rod.**

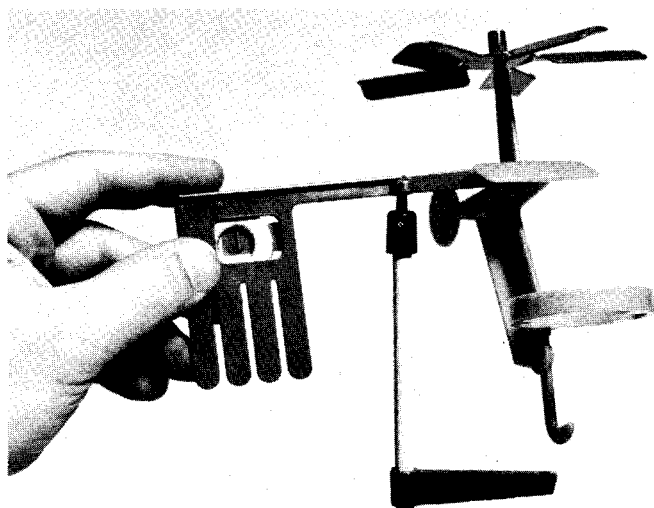

- i. Attach mailbag to side of mail holder.**

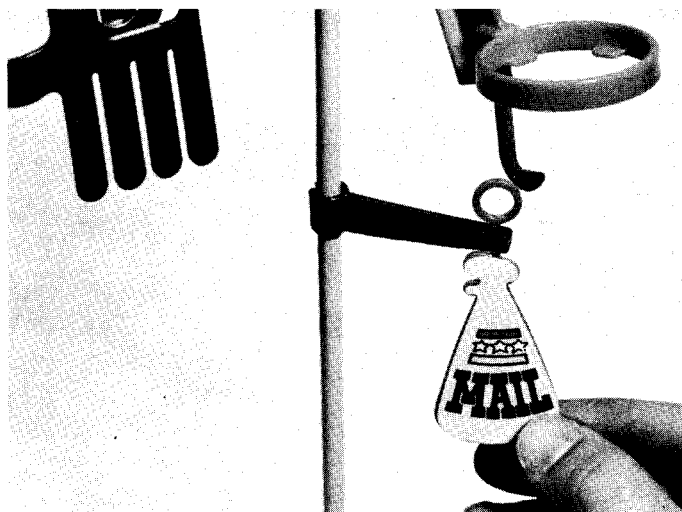


j. Place ball in helicopter "cockpit". Adjust height of mail holder by sliding it up or down rod so helicopter will be able to pick up mail.

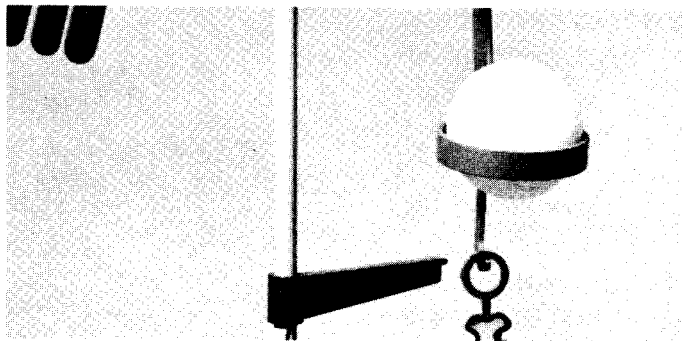


8. TO INSERT BATTERIES IN AIR GUN:


a. Gently squeeze top of battery compartment at the center and lift cover off.

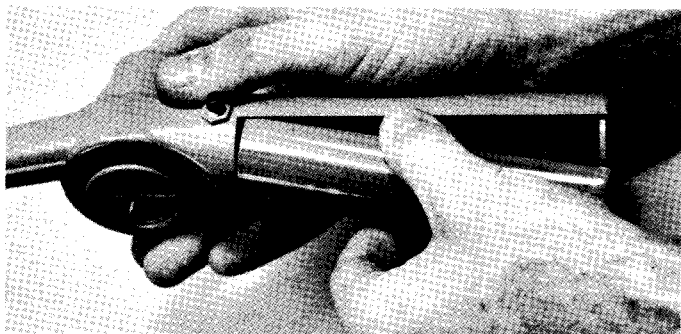

b. Insert 2 "D" batteries (not supplied) with the positive (button) ends facing the motor unit.

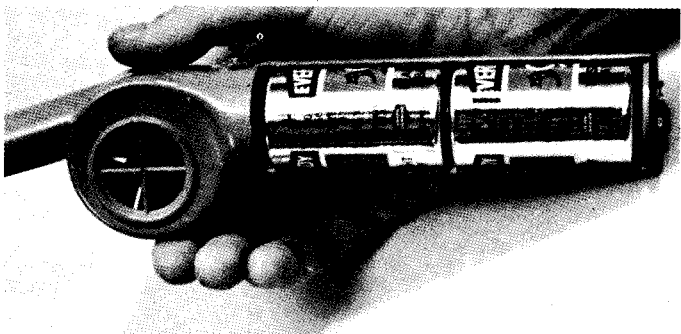

c. Replace cover by snapping back into closed position.

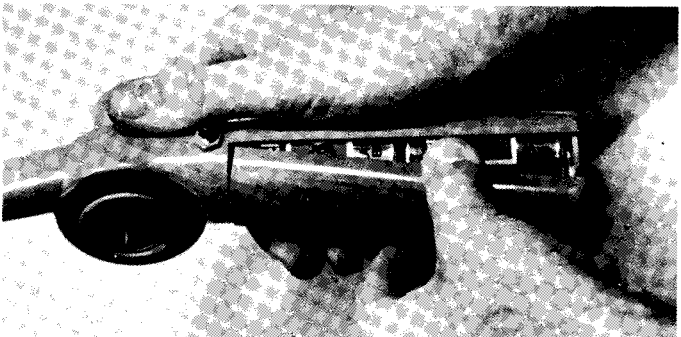

TO OBTAIN 3 ADDITIONAL "Air Trix" BALLS: Send a check or money order (No COD's please) in the amount of .50¢ to Milton Bradley Company, Springfield, Mass. 01101. We pay mailing and handling charges. Print your name, address and zip code clearly and request #4655 set of 3 Air Trix balls.